


i DISPLAY Retail Tablet S/M Floor Display

Product Specification & Assembly Instructions

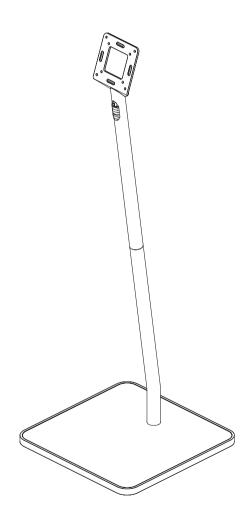




i Display's range of fixtures are the perfect retail accessory for your i Display Retail Tablet.

The floor display gives you a complete solution to secure your display to any floor location within the store.


The i Display Retail tablet S/M floor display is made from high-quality materials and is very simple to assemble. Additionally, the fixture's base cover can be easily branded to best suit your company's need.

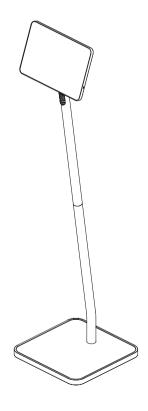




Product Specification

LXWXHmm

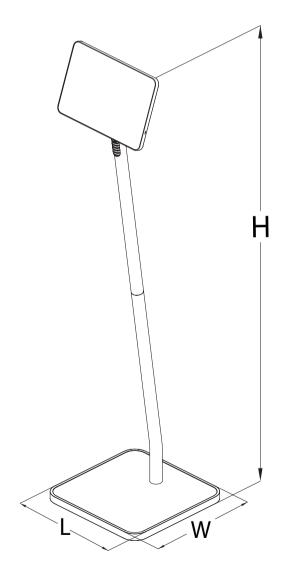


For further information or support, please contact support@i-display.com

i DISPLAYInteractive Digital Displays

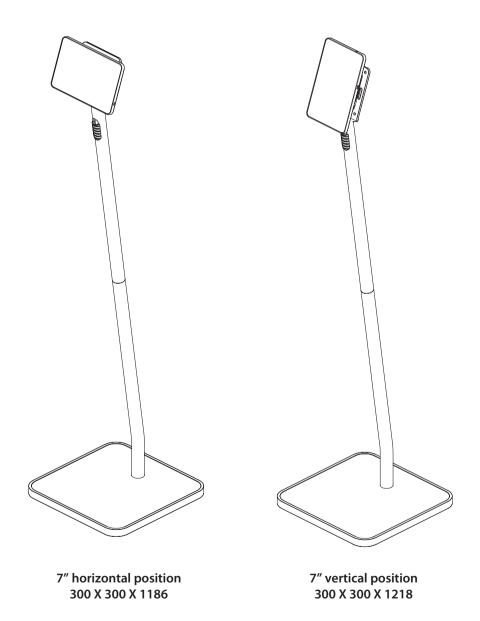


i DISPLAY Interactive Digital Displays

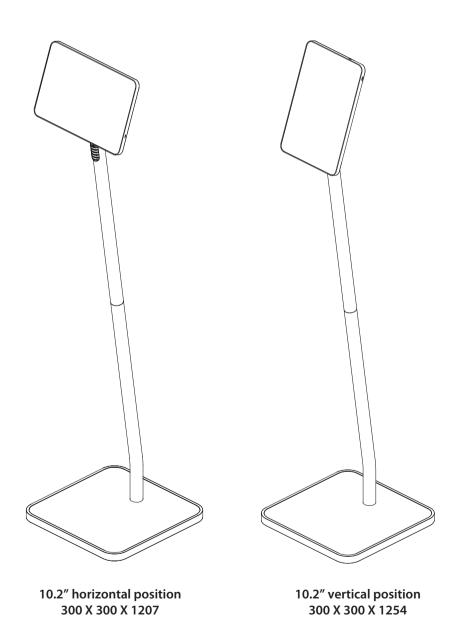




Components

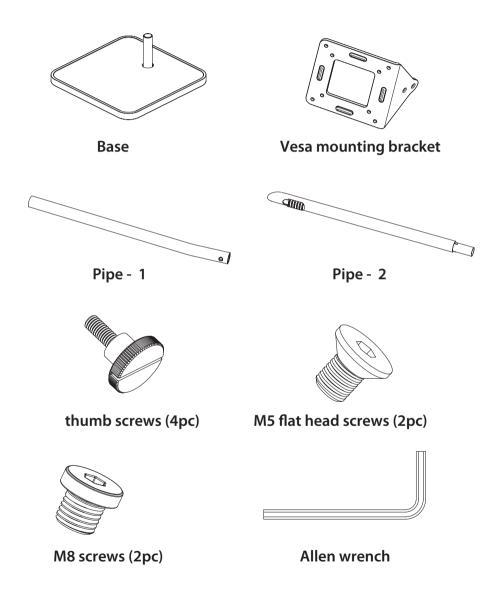



Assembly Instructions


Step 1
Pass the DC jack through the base of the stand and pipe-1.

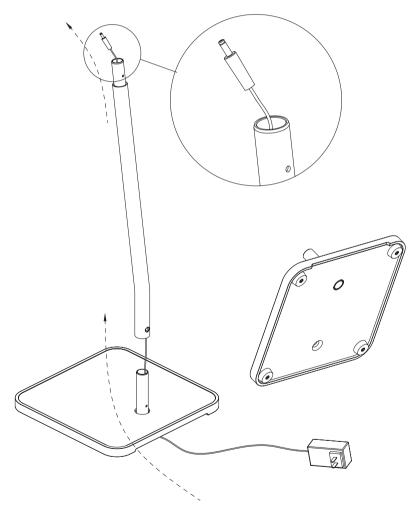

For further information or support, please contact support@i-display.com




Step 2 Insert pipe-1 to the base, use a M5 flat head screw to attach them together, and then tighten the screw with Allen wrench.

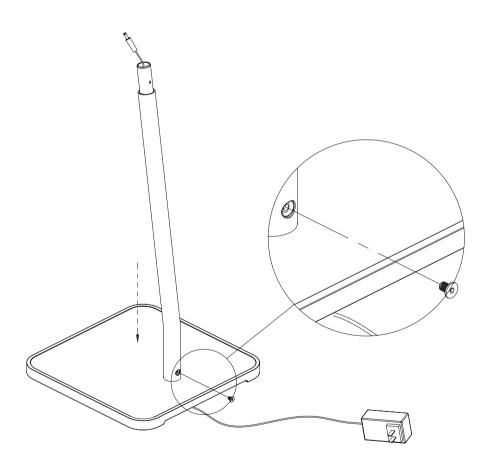




Step 3 Remove the cable cover, pass the DC jack through the pipe-2, then replace the cable cover.

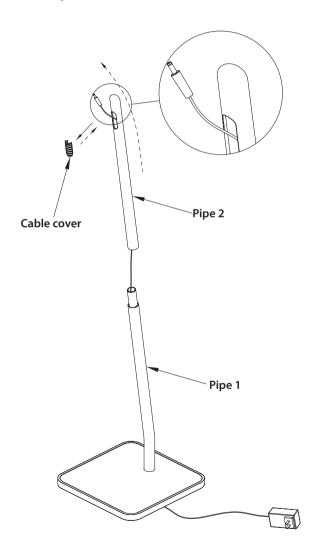




Step 4
Attach pipe-2 into pipe-1, insert M5 flat head screw, and then tighten the screw with Allen wrench.

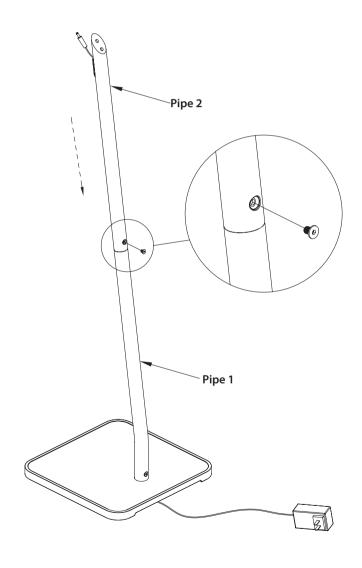




Step 5
Use 2 M8 screws to attach the Vesa bracket and pipe-2 together, and then tighten the screws with the Allen wrench.

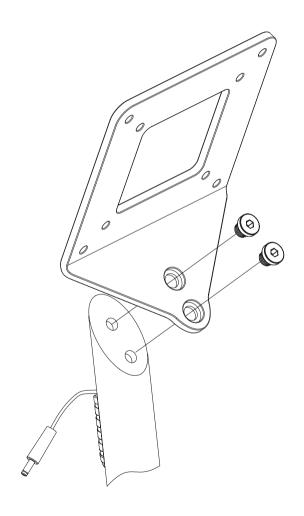




Step 6 Use the 4 thumb screws to affix your Retail Tablet to the floor display.

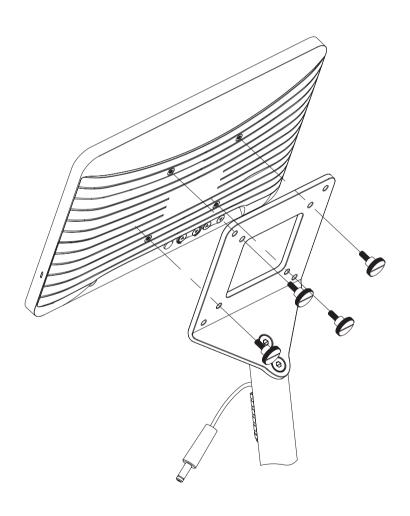




Note:

For using the floor stand with the Retail Tablet S you must first attach the Vesa bracket Adapter (included with the Retail Tablet S). Use 4 thumb screws to affix the Vesa bracket to the Retail Tablet.

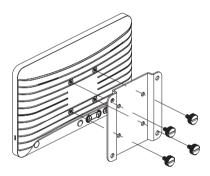


Use 4 thumb screws to affix the retail tablet to the floor display.

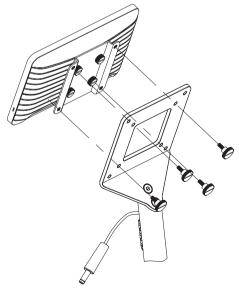

For further information or support, please contact support@i-display.com




Step 7
Connect the DC jack to the Retail Tablet.

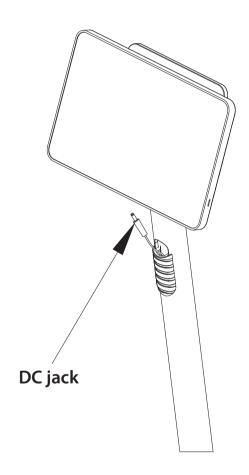



Step 8 - Optional

To replace the cover of the base use the replacement hole to push the acrylic base out and replace it with a new cover.

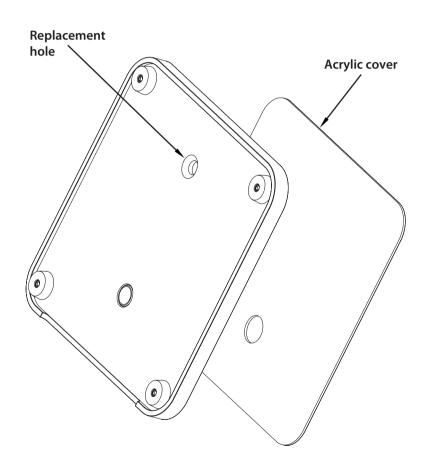



Die Cut

Please refer to the die cut below if you would like to brand the cover of your base

