


i DISPLAY Retail Tablet Fixed Wall Mount Bracket

Product Specification & Assembly Instructions

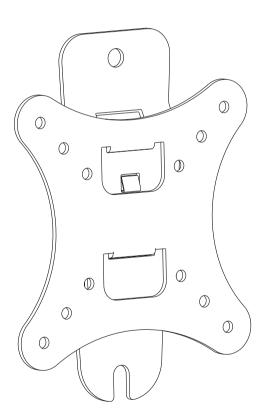




i Display's range of fixtures are the perfect retail accessory for your i Display Retail Tablet and Android Advertising Display.


The wall mount bracket gives you a complete solution to secure your display to any wall location within the store.

The i Display Retail tablet wall mount bracket is made from high-quality materials and is very simple to assemble.

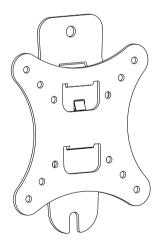




Product Specification

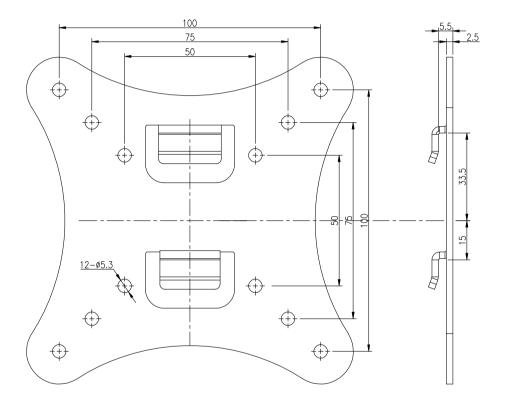



i DISPLAY Interactive Digital Displays


Components

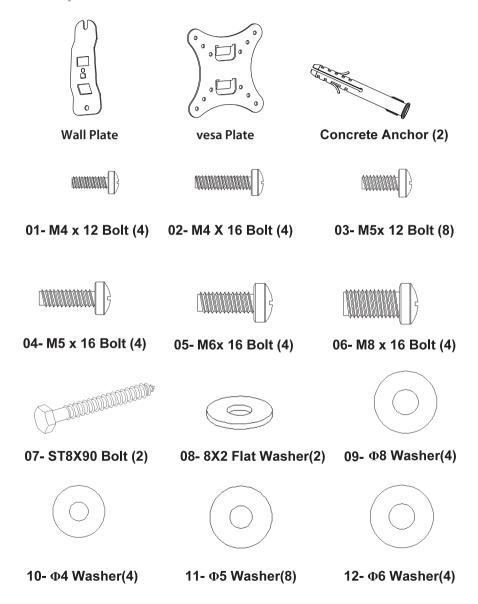




Assembly Instructions


Step 1 Install Wall Plate onto the wall. For Wooden wall:

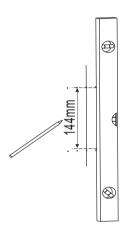

1.1 Draw two vertical lines and two parallel lines 144 mm apart. Drill two Ø5mm holes 90mm deep on the marked places.

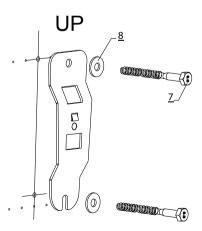


 1.2 Use 2 bolts (7) and 2 washers (8) to affix the wall plate on the wall.







For Brick wall, Stone wall or Concrete wall:

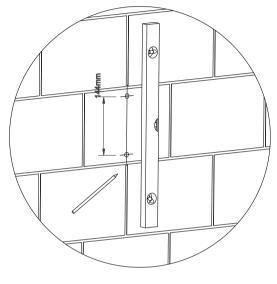


 1.3
Draw two vertical lines and two parallel lines
144 mm apart. Drill two Ø10mm holes
87mm deep.



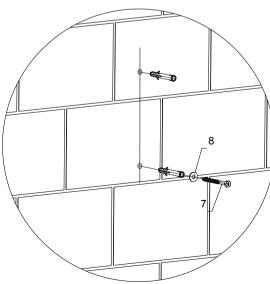


 1.4
Mount 2 concrete
anchors in the holes.
on lower hole, use
bolt (7) and washer (8).
Make sure screw has
8mm distance from
wall. Then repeat 1.2.





Step 2 Install the vesa plate to the Retail Tablet. Fasten the vesa plate to the back of the tablet by 4 screws (1/2/3/4) and washer (9/10/11/12).

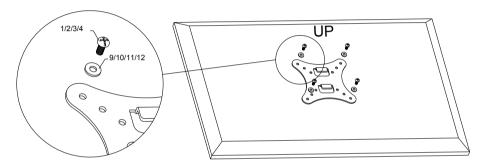

Step 3
Hook the assembled retail tablet to the wall plate by inserting the hooks of the vesa plate into the open slats of the wall plate. Both bracket parts should "click" when completly inserted.

