 


# NUVO®

## The Sound of LiVing.



### Simplese Installation Manual






## ENGLISH

### Danger

Exposure to extremely high noise levels may cause a permanent hearing loss. Individuals vary considerably to noise induced hearing loss but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a sufficient time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the following permissible noise level exposures:

DURATION PER DAY (HOURS)	8	6	4	3	2	1
SOUND LEVEL (dB)	90	93	95	97	100	103

According to OSHA, any exposure in the above permissible limits could result in some hearing loss. Ear plugs or protectors in the ear canal or over the ears must be worn when operating this amplification system in order to prevent a permanent hearing loss. If exposure in excess of the limits as put forth above, to insure against potentially harmful exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of inducing high sound pressure levels, such as this amplification system, be protected by hearing protectors while this unit is in operation.

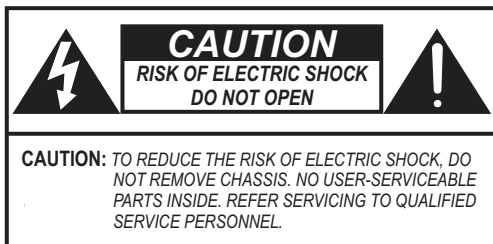

**AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR.**



THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE UNIT.



APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be kept for future reference.
3. Read and understand all warnings listed on the operating instructions.
4. Follow all operating instructions to operate this product.
5. This product should not be used near water, i.e. Bathtub, sink, swimming pool, wet basement, etc.
6. Only use dry cloth to clean this product.
7. Do not block any ventilation openings, It should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
8. Do not install this product near any heat sources ;such as,radiators, heat registers, stove or other apparatus (including heat producing amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the Other.A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord being walked on or pinched, particularly at Plugs, convenience receptacles and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
11. Only use attachments specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as, power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

## FRENCH

### Danger

L'exposition a des niveaux eleves de bruit peut provoquer une perte permanente de l'audition, Chaque organisme humain reagit differemment quant a la perte de l'audition, mais quasiment tout le monde subit une diminution de l'acuite auditive lors d'une exposition suffisamment longue au bruit intense. Les autorites competentes en reglementation de bruit ont defini les expositions tolerees aux niveaux de bruits:

DURE EN HEURES PAR JOUR	8	6	4	3	2	1
INIVEAU SONORE CONTINU EN dB	90	93	95	97	100	103

Selon les autorites, toute exposition dans les limites citees ci-dessus, peuvent provoquer certaines pertes d'audition. Des bouchons ou protections dans l'appareil auditif ou sur l'oreille doivent etre portes lors de l'utilisation de ce systeme d'amplification afin de prevenir le risque de perte permanente de l'audition, Dans le cas d'expositions superieures aux limites precitees il est recommande, afin de se premunir contre les expositions aux pressions acoustiques lvees potentiellement dangeure u ses, aux personnes exposees aux equipements capables de delivrer de telles puissances, tels ce systeme d'amplification en fonctionnement, de proteger l'appareil auditif.



CE SYMBOLE A POUR BUT D'AVERTIR L'UTILISATEUR DE LA PRESENCE DE VOLTAGE DANGEREUX NON-ISOLE A L'INTERIEUR DE CE PRODUIT QUI PEUT ETRE DE PUISSANCE SUFFISAMMENT IMPORTANTE POUR PROVOQUER UN CHOC ELECTRIQUE AUX PERSONNES.



CE SYMBOLE A POUR BUT D'AVERTIR L'UTILISATEUR DE LA PRESENCE D'INSTRUCTIONS D'UTILISATION ET DE MAINTENANCE DANS LES DOCUMENTS FOURNIS AVEC CE PRODUIT.



AFIN DE REDUIRE LES RISQUÉ D'INCENDIE ET DE DECHARGE ELECTRIQUE, NE PAS EXPOSER CET APPAREIL A LA PLUIE OU A L'HUMIDITE.

### IMPORTANTES INSTRUCTIONS DE SECURITE

1. Lire avec attention toutes les recommandations et précautions d'emploi avant d'utiliser ce produit.
2. Toutes les recommandations et précautions d'emploi doivent être conservées afin de pouvoir s'y reporter si nécessaire.
3. Lire et comprendre tous les avertissements énumérés dans les précautions d'emploi.
4. Suivre toutes les précautions d'emploi pour utiliser ce produit.
5. Ce produit ne doit pas être utilisé près d'eau, comme par exemple baignoires, éviers, piscine, sous-sol humides ... Etc.
6. Utiliser exclusivement un chiffon sec pour nettoyer ce produit.
7. Ne bloquer aucune ouverture de ventilation. Ne pas placer le produit tout contre un mur ou dans une enceinte fermée, cela générerait le flux d'air nécessaire au refroidissement.
8. Ne pas placer le produit près de toute source de chaleur telle que radiateurs, arrivées d'air chaud, fourneaux ou autres appareils générant de la chaleur (incluant les amplificateurs producteurs de chaleur) .
9. Ne pas négliger la sécurité que procure un branchement polarisé ou avec raccordement à la terre, Un branchement polarisé comprend deux fiches dont l'une est plus large que l'autre. Un branchement à la terre comprend deux fiches plus une troisième reliée à la terre. Si la fiche secteur fournie ne s'insère pas dans votre prise de courant. consulter un 'électricien afin de remplacer votre prise obsolète.
10. Protéger le cordon d'alimentation de tout écrasement ou pincement, particulièrement au niveau des fiches, des réceptacles utilisés et à l'endroit de sortie de l'appareil. Ne pas casser la fiche de terre du cordon d'alimentation.
11. Utiliser uniquement les accessoires spécifiés par le constructeur.
12. Utiliser uniquement avec le chariot de transport, le support, le trépied, la console ou la table spécifiés par le constructeur ou vendus avec l'appareil. Lors de l'utilisation d'un chariot, bouger avec précaution l'ensemble chariot/l'appareil afin d'éviter les dommages d'un renversement.
13. Débrancher cet appareil lors d'orages ou s'il n'est pas utilisé pendant une longue période.
14. Des précautions doivent être prises afin qu'aucun objet ne tombe et qu'aucun liquide ne se répande à l'intérieur de l'appareil par les orifices de ventilation ou n'importe quelle autre ouverture.
15. Pour toutes interventions techniques s'adresser à un technicien qualifié. L'intervention technique est nécessaire lorsque l'appareil a été endommagé de n'importe quelle façon, comme par exemple si le cordon secteur ou sa fiche sont détériorés, si du liquide a coulé ou si des objets sont tombés à l'intérieur de l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.
16. ATTENTION: Pour réduire le risque d'incendie ou de choc électrique ne pas exposer l'appareil à la pluie ou à l'humidité.

## Introduction


Congratulations on your purchase of the NuVo Simplese System. Simplese brings the best of today's digital technology to a true whole-home audio system. Listening to multiple audio sources from independent zones throughout the home has never been easier or more affordable.

The elegant BTicino® style keypads allow independent selection of up to four different audio sources from up to four zones in the home. They are available in white, black and silver to help match a variety of decorating choices. Generation D digital amplification provides clear, precise digital sound to each zone without the heat generated by traditional analog amplification. The integrated infrared repeater in each keypad means you can control all of your audio sources wirelessly from any zone of your home.


Enjoying quality audio throughout the home is simple and affordable with Simplese. This installation manual is designed to provide a sequential, step-by-step guide to making full use of the many features and capabilities of the Simplese System.

### Package Contents:

1 NV-A4D	Four-Source, Four-Zone Amplifier
4 NV-A4DKP-BT	Bticino® style Zone Controller Keypads available in white, black and silver.
1 NV-A4DAP-DC	Decora Allport™ Multi-port connection hub
1 NV-APC	Allport connection cable
1 pr. NV-REM1U	Single rack space rack ear mounts
4 NV-VEC	IR emitters with feedback LED
1 NV-PC2	IEC 2-wire power cable

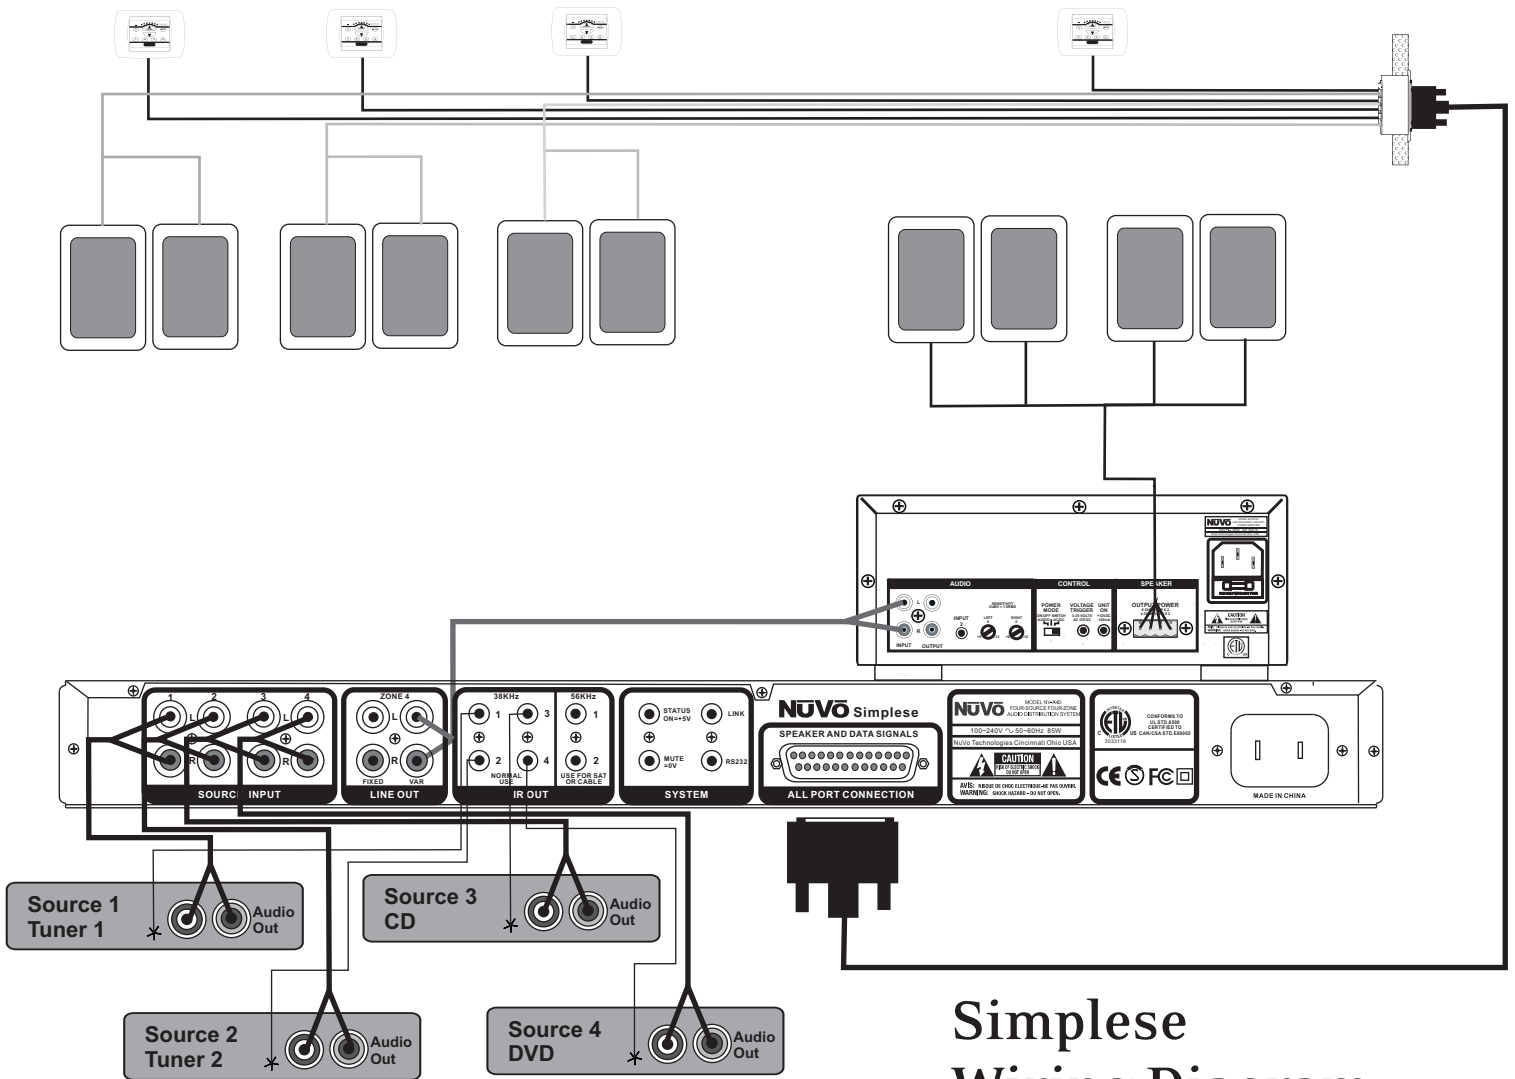


## Simplese Wiring Diagram

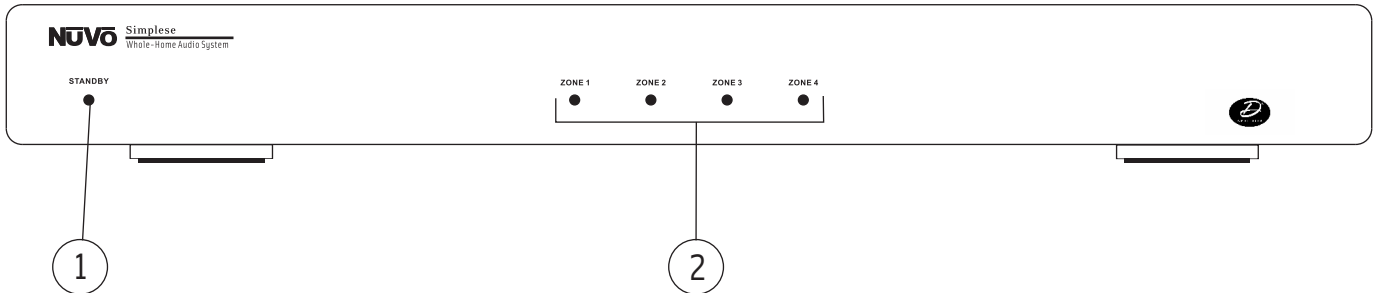

## Front Panel Features

1. Stand-by LED- This LED (light emitting diode) indicates, when lit, that the Simplese amplifier is plugged into an AC power source.
2. Zone LED- Each of these LEDs indicates, when lit, that its zone keypads are turned on.

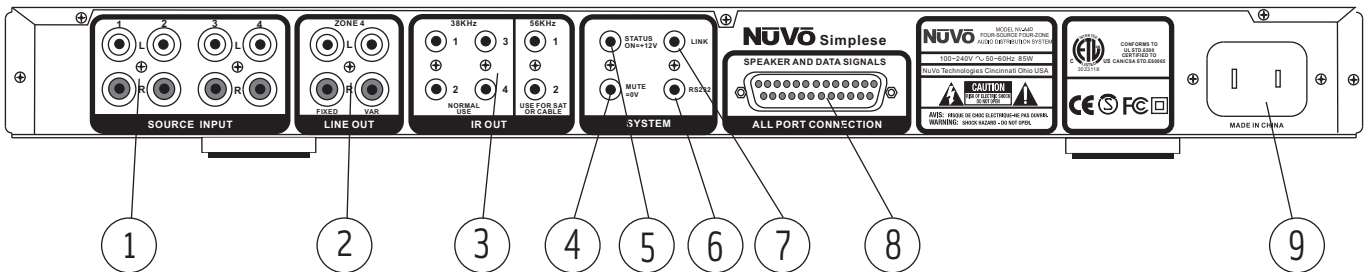


## Back Panel Features

1. Source Inputs Each of these stereo RCA inputs receives an audio signal from up to four independent audio sources.
2. Zone 4 Lineouts These fixed and variable lineouts are used for attaching additional amplification to the zone 4 audio outputs.
3. IR OUT These outputs are designed to be used with the included IR (Infrared) emitters to transfer IR function commands from the zone keypads to the appropriate audio source equipment; see IR Outputs pg. 9.
4. MUTE This 3.5mm mono connection is designed to be used in conjunction with the NV-MI1 mute interface; see Mute Input and the NV-MI1, pg. 13.
5. STATUS This 3.5mm mono connection provides a constant +5 volt output when a zone is turned on. This can be used to trigger external equipment.
6. RS232 This is used for factory purposes only and has no system function relevance.
7. LINK This 3.5mm mono output is used to expand the Simplese System from four to eight zones; see Using the Link Jack to Create Eight Zones, pg. 12.
8. Allport Connection This 25-pin terminal is used in conjunction with the Allport cable to integrate the zone keypads and speakers into the system; see Allport Termination and Installation, pg. 8.
9. AC This is used with the included AC power cable to provide electrical power to the system when attached to an active AC power outlet.




## Keypad Features

- |                     |                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Volume Level     | The level of the zone volume is indicated by these LEDs (light emitting diodes).                                                                                     |
| 2. Power            | The power button turns that keypad's zone on and off independently of the other zones. Pressing and holding the power button turns all the zones off simultaneously. |
| 3. Volume           | Independent audio volume level for each zone is controlled with these buttons.                                                                                       |
| 4. IR Receiver      | Each keypad has an IR (infrared) receiver located under the volume button for wireless control of the audio source equipment.                                        |
| 5. Mute             | The mute button temporarily silences any audio playing in that keypad's zone.                                                                                        |
| 6. Source Selection | The source buttons independently select any of the four sources connected to the Simplese amplifier. The selected source button will remain lit.                     |

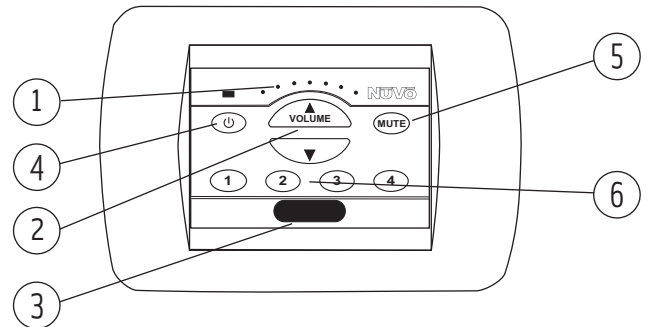

## Remote Control Features

- |                     |                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Power            | This button turns the zone on and off and powers all the zones off when it is pressed and held.                                                                                           |
| 2. Source Selection | These buttons correspond to the four source buttons on the zone keypad.                                                                                                                   |
| 3. Mute             | Mutes the zone in the same way as the keypad mute button.                                                                                                                                 |
| 4. Volume           | Performs the same function as the volume button on the zone keypads. The volume level indicator on the keypad will respond correspondingly to the volume command from the remote control. |

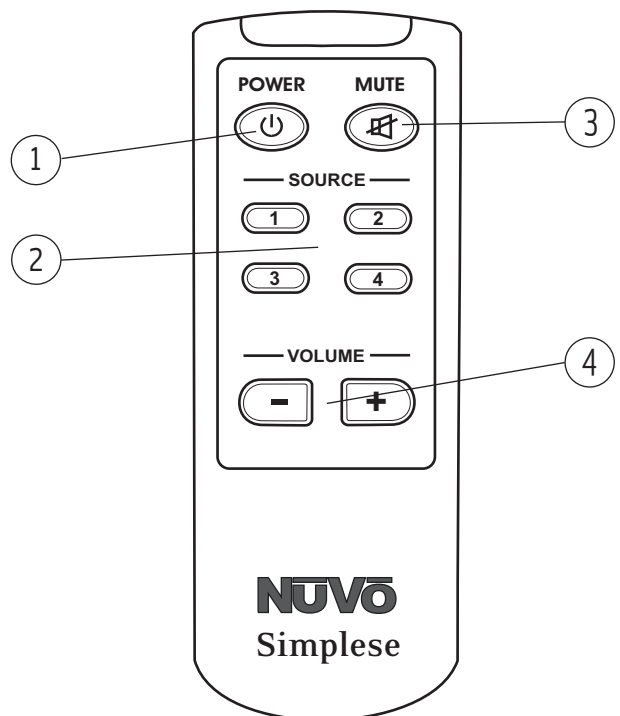

## Installing the Simplese System in Your Home

### I. Prewire

The Simplese System uses Cat-5 cable for keypad control and either two- or four-conductor 16-gauge speaker wire. All the wire is "homerun" from each zone to the location of the Allport connection hub.

### Complete Cat 5 Crimping Instructions

The NuVō audio systems require Cat 5, unshielded, twisted pair (UTP), for communication between the keypads/Display Pads and the main amplifier unit. Each end of the wire is terminated with an RJ45 connector.

The concerto System can accommodate 2000 total feet of Cat 5 cable. For the most reliable operation, it is best that no single run of Cat 5 exceeds 250 feet.

The correct wiring scheme for the Cat 5 cable is standard EIA/TIA 568A. Properly terminating the Cat 5 cable is crucial for the operation of the system. It is very important to use a good quality crimp tool, and testing each end to end run with a Cat 5 wire tester will insure that your system operates flawlessly, fig.1.

#### Step-by-Step Crimping Instructions

1. Strip a 2 to 3 inch portion of the insulation, exposing the 4 twisted pairs.
2. Untwist the wires and fan them out individually. Arrange the wires into the correct color scheme as shown in Fig. 1.
3. Flatten the wires in their correct order, and trim them evenly across the top. Most crimp tools have a wire trimmer built-in. It is best to trim the wires to about 1/2" in length.
4. While holding the wires flat between your thumb and forefinger, insert the wires into the RJ45 connector, so each is in its own slot. Push the wire into the RJ45, so all 8 conductors touch the end of the connector. The insulation jacket should extend beyond the crimp point of the RJ45.
5. Insert the RJ45 into the crimp tool receptacle and squeeze the tool firmly. Note that a ratchet type tool should tighten down until it no longer clicks.
6. The RJ45 should be firmly crimped to the Cat 5 insulation. It is necessary that the color scheme be repeated identically on each end of the wire.


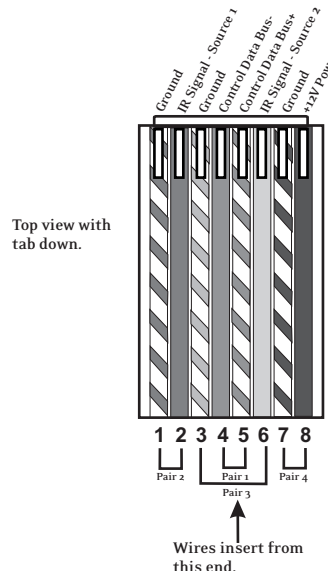


Fig. 1: EIA 568A wiring scheme for Cat 5 Cable

- Pin #
1. Green Stripe
  2. Green
  3. Orange Stripe
  4. Blue
  5. Blue Stripe
  6. Orange
  7. Brown Stripe
  8. Brown

Note: Colors listed as "stripe" are a white wire with a colored stripe.

Step 1

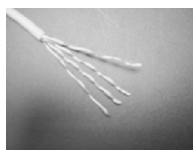

Step 2



Step 3




Step 4



Step 5




Step 6

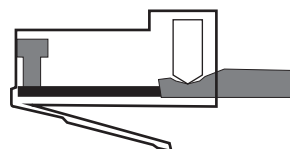

## II. Speaker Wire Termination

It is important to keep the proper orientation of positive and negative signal for each speaker connection. Typically, two-conductor speaker wire uses red to denote positive and black to denote negative. Some types of wire indicate positive with a dark line running through the insulation. Four-conductor wire can also be used. This has four separate wires in one outer jacket, making it possible to run a single speaker wire to a zone for its pair of speakers. This type of wire typically uses red and black for one speaker and white and green as positive and negative for the second speaker.

**Note: The Simplese System is designed to handle one pair of 8-ohm speakers per zone. Using more than one pair of speakers per zone could cause damage to the amplifier output.**

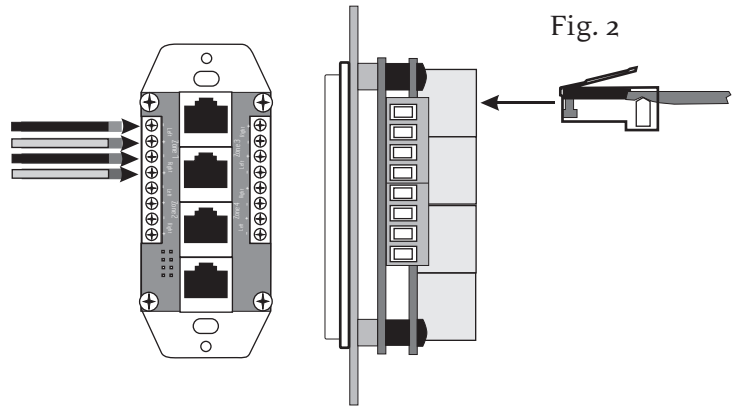

## III. Allport Termination and Installation

Both the speaker wire and Cat-5 cables for each zone terminate into the back side of the Allport. The order of Cat-5 plug-ins is irrelevant to the operation of the system, but it is recommended that you label the individual Cat-5 cables for future reference. Follow the zone and polarity labeling for the speaker wire termination, fig. 2.

The final connection from the Allport is made with the Allport cable supplied with the Simplese System, fig. 3.

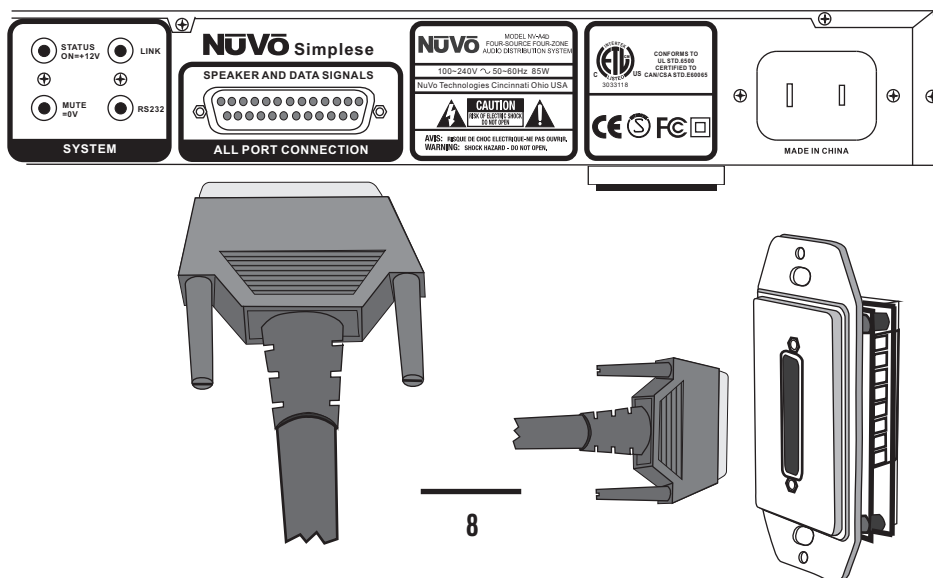


Fig. 3

## IV. Installing the Simplese Amplifier

The Simplese amplifier component is designed to be placed on a shelf or in a component rack. Rack ear mounts are supplied with the system. If you are using the rack ears and mounting the amplifier with other components, you should remove the feet. Remove the two screws at the front of each side of the lid and use the longer screws included with the rack ears to attach the ears to the Simplese amplifier.

The audio sources are plugged into the four source inputs on the back panel of the Simplese amplifier using stereo RCA cables, fig. 4.

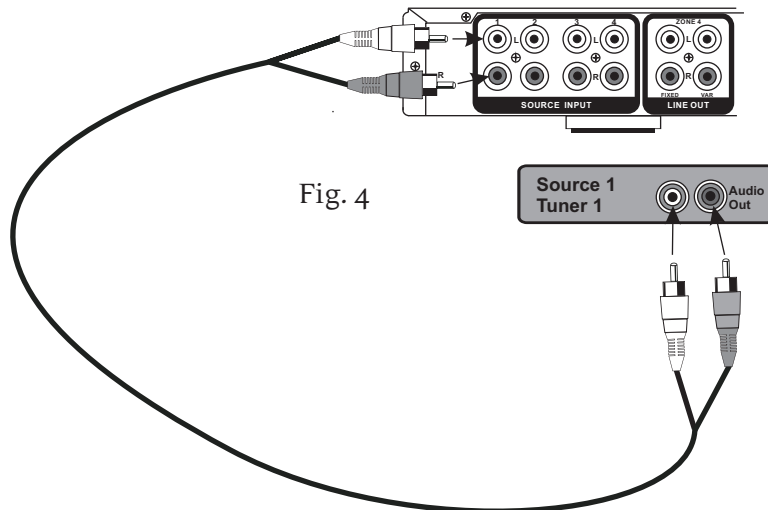


Fig. 4

## V. IR Outputs

The Simplese System ships with four IR emitters for transferring IR data from the keypad receivers (located under the volume button) to the IR receiver on each piece of source equipment. There are two separate IR output sections on the back panel. The 38Khz outputs are used for most audio sources. The exception to this is cable and satellite boxes, which operate at a higher IR carrier frequency closer to 56Khz. A second-source one and two 56Khz output is available for these devices. It is important that the output being used for each source matches the source input number. The outputs work individually with each source to allow independent source control. Simply plug the emitter into the appropriate IR output on the back of the Simplese amplifier and attach the flasher end over the IR receiver of the source equipment, fig. 5.


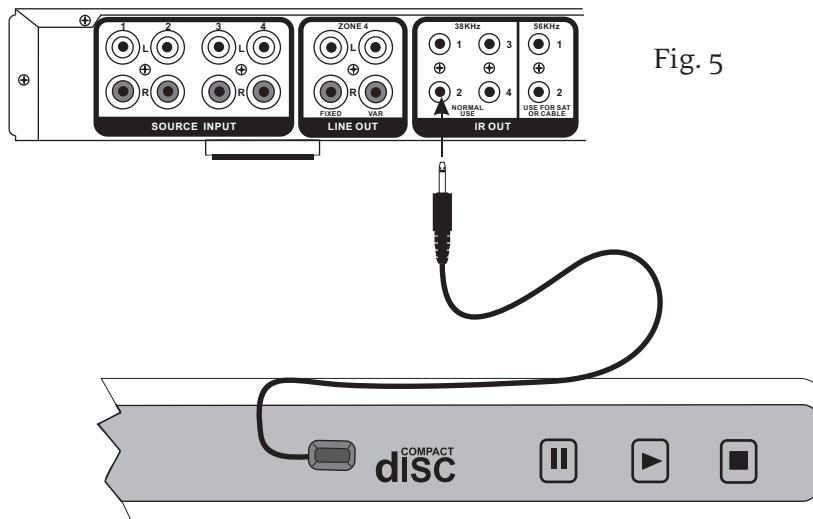


Fig. 5

## VI. Keypad and Zone Setup

Each keypad requires a specific zone setting to establish the keypad's location. This setting is made on the back of the keypad using an eight-position rotary switch. To set the switch, place a small slot-head screwdriver in the slot in the switch and turn it clockwise to the appropriate zone number 1-4, fig. 6. The remaining switch positions, 5-0, allow for an additional keypad in each zone. Position 5 corresponds to zone 1, 6 to zone 2, 7 to zone 3, and 0 to zone 4. Note that the Allport only has four RJ45 jacks, so additional keypads require the use of a Cat-5 splitter.

Fig. 6

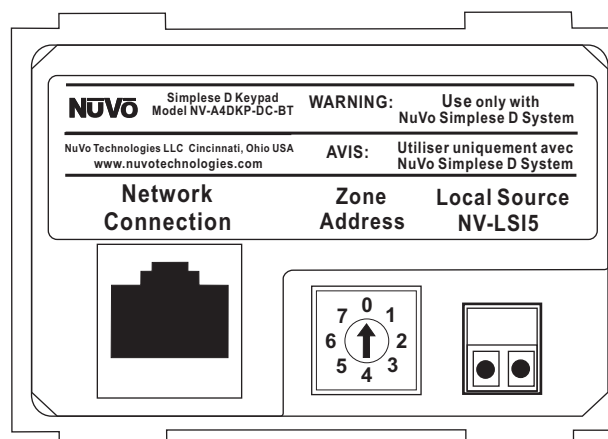

## EQ Control and Source Grouping

The keypads can be used to set specific zone functions. These are for bass and treble EQ response and source grouping. To change bass response, press the Mute button and Source 1 button simultaneously. Adjust the bass level up or down by using the Volume Up and Volume Down buttons. The volume indicator LEDs will indicate the output level, fig. 7. Adjust treble response using the same process. This is accessed by pressing the Mute and Source 2 buttons. Once the desired setting is made, press the Source button again to return the keypad to normal operation.

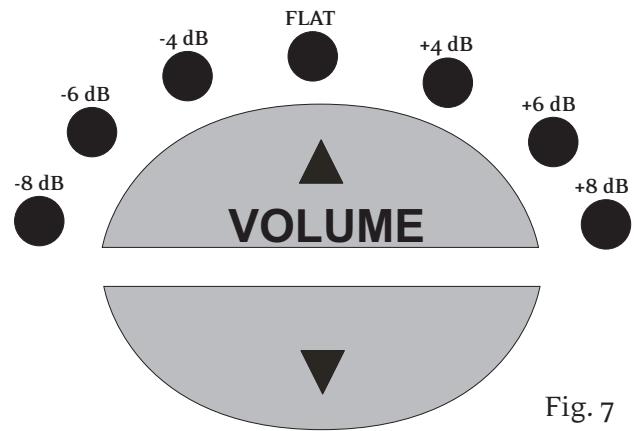


Fig. 7

Source grouping is a feature that allows multiple zones in an open living space to always share the same source selection but still retain individual volume and on/off control. This is achieved by pressing Mute and Source 3. Volume Up enables the group function, and Volume Down disables the group function and causes the keypad to operate independently of all other groups, fig. 8.

## Volume Reset

The Simplese System keypads automatically reset the listening volume to a low level when all zones have been turned off and a zone is turned on again. If a zone is turned off and turned back on before all the zones are turned off, it will return at the previous volume level.

## All Off

All the zones in the system can be turned off simultaneously from any keypad by pushing and holding the power button until the keypad goes completely dark. A single push and release of the power button will only turn that zone off. If another zone is on, the power button will remain lit.

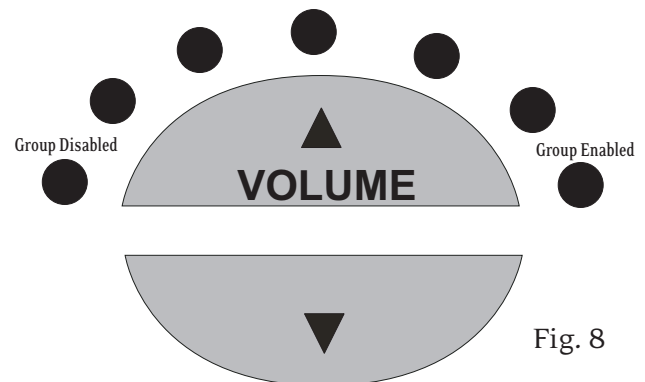


Fig. 8


## Master Mode/All On

The Simplese System has an All On feature. Any keypad within the system, which can be up to eight zones, has the ability to become a master control for the entire house. The master keypad will control zone on, volume level, and source selection for all other zones.

To place a keypad in Master Mode function, simply press the Mute and Source 4 buttons simultaneously. This will cause the volume indicator LED for that zone's keypad to flash continuously. All other zones will then turn on to the same relative volume level and increase or decrease with the volume adjustment on the master keypad.

Any of the other zone keypads have the ability to override the master function by selecting a new source, changing a local zone's volume control, or by turning a local zone's keypad off and back on.

The master mode is turned off by repeating the sequence of pressing the Mute and Source 4 buttons.

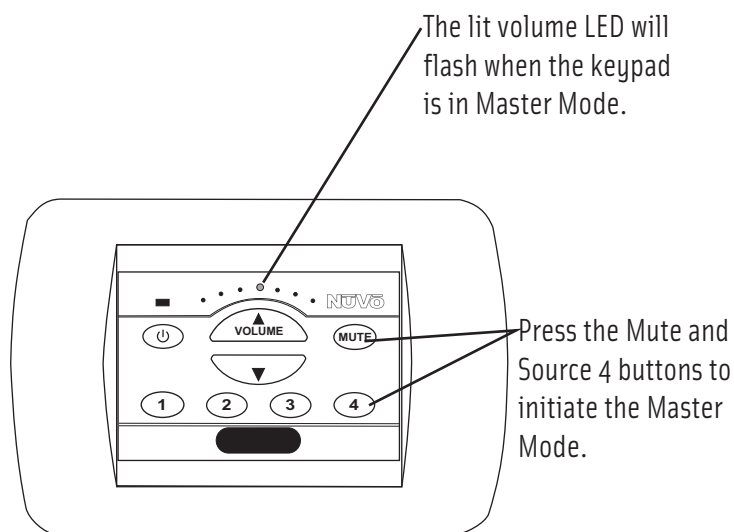


## VII. Using the fixed and Variable Lineouts


Zone 4 is equipped with two types of pre-amp lineouts for use with an additional amplifier. This can be dedicated to an outdoor zone or large living area that would benefit from more than one pair of speakers. NuVo manufactures a 200-watt stereo amplifier specifically designed for this purpose, called the P2100, although any audio amplifier can be used with the lineouts. The examples shown in this manual refer specifically to the P2100.

The variable lineout is intended for use in a zone where you want the Simplese keypads to control the volume output of the external amplifier, fig. 9.

Fig. 9

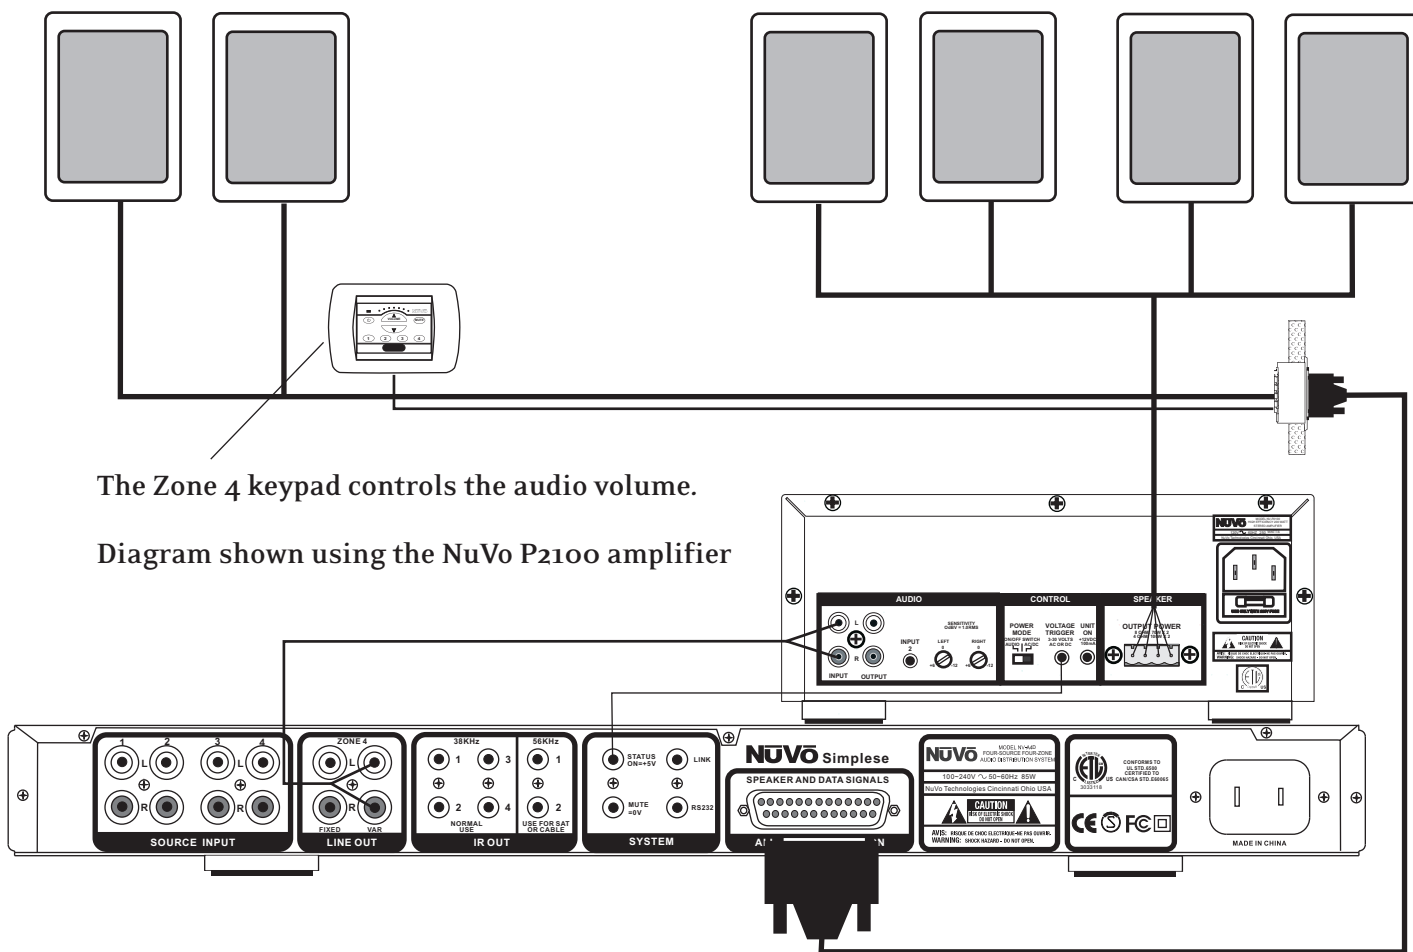


The fixed lineout can be used for zones where it is more appropriate to have a separate volume control from the NuVo keypad for the external amplifier, fig. 10. A good example of this use would be an outdoor zone that is being used in conjunction with zone 4. All three versions, zone 4 amplified output, variable lineout, and fixed lineout can be used simultaneously.

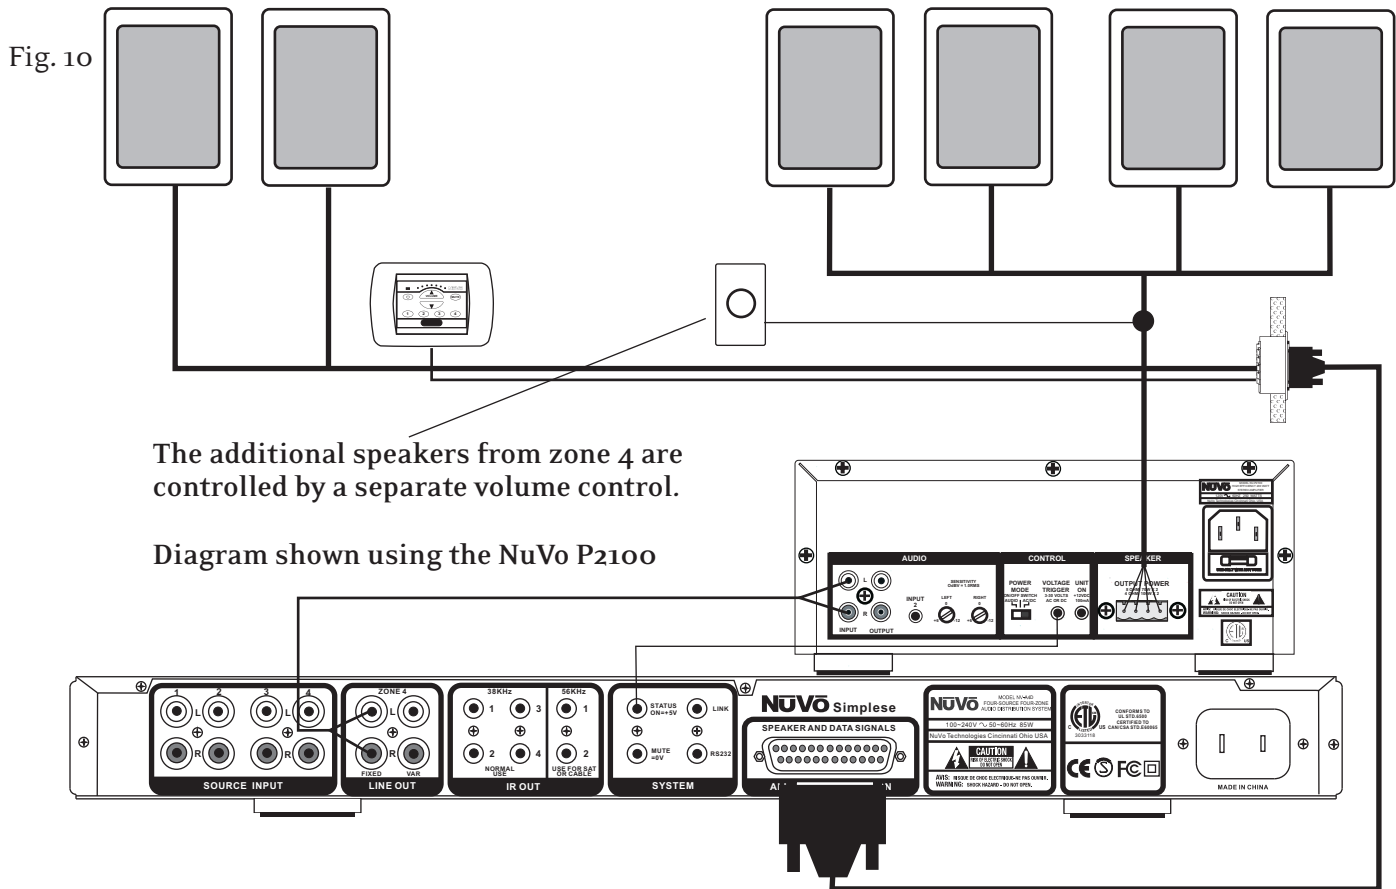

## VIII. Using the Link Jack to Create Eight Zones

Two separate Simplex Systems can be made to react as one using the back-panel 3.5mm connection labeled LINK. This requires the use of “Y” cables to link the source inputs and IR outputs. A single mono mini-patch cable is then plugged into the LINK jack on both Simplex amplifiers. This links the All Off command so when it is initiated at any of the zone keypads, all eight zones will turn off, fig. 11

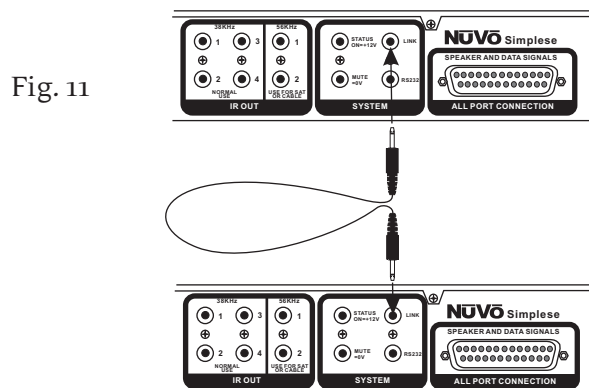





## IX. Mute Input and the NuVo MI1

The back panel of the Simplese amplifier has a 3.5mm mono input labeled MUTE. This is designed to be used with the NuVo MI1 Mute Interface. When the MI1 is connected, the system will temporarily mute when the phone or doorbell rings, fig. 12.

Fig. 12

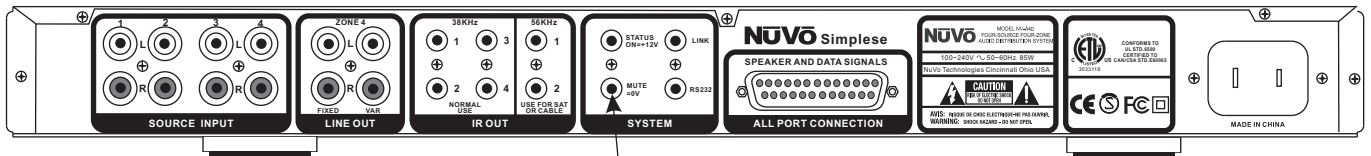

The MI1 connects to the NuVo amplifier using a standard mono patch cable with a mini-plug on each end. Plug one end into the EXT. MUTE input on the back of the amplifier and the other end into the input on the front of the MI1.

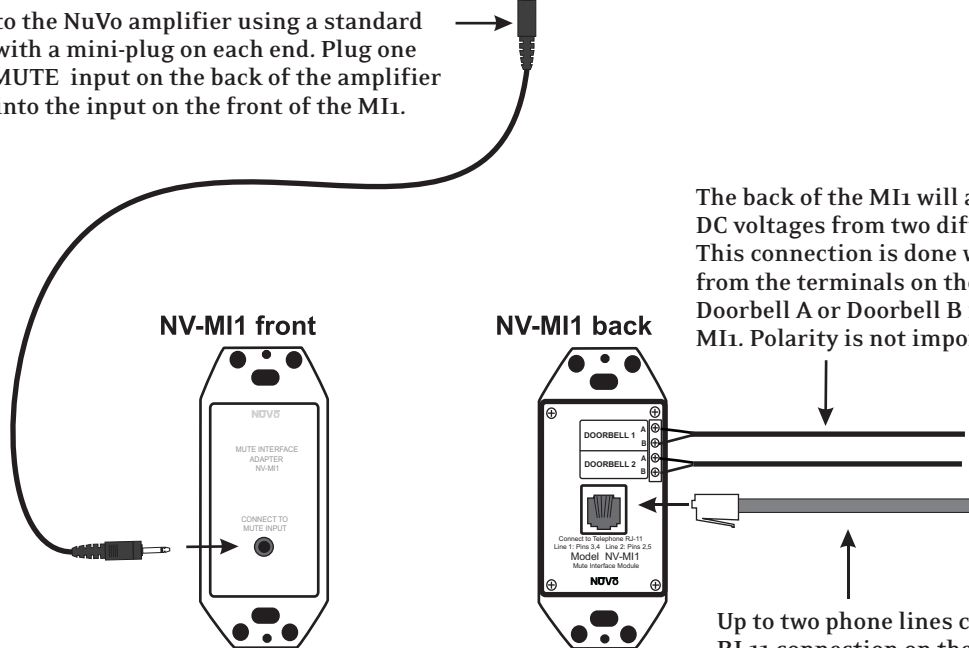

The back of the MI1 will accept up to two AC or DC voltages from two different doorbell chimes. This connection is done with two conductor wire from the terminals on the doorbell chime to the Doorbell A or Doorbell B inputs on the back of the MI1. Polarity is not important for this connection.

Up to two phone lines can be brought into the RJ-11 connection on the back of the MI1. The voltage from the phone ringer will trigger the NuVo System to mute.

## Simplese D Specifications

### Zones 1-6 Power Amplifier Outputs

Continuous Average Output Power	30W (15W x 2)
Two channels driven 30-20kHz @1% THD	
Rated Distortion (1/2 power)	0.40%
Rated Impedance	6 Ohms
Damping Factor	50+
Frequency Response (20-20kHz)	±2dB

### Preamplifier Section

Variable output	0-600mV
Fixed output	600mV
Impedance	600 Ohms

### Source Inputs 1-4

input Impedance	10K
Input Sensitivity for rated power	300mV RMS
Input Overload	3V RMS

### Emitter Outputs

Source Outputs	4
Output Drive Current	100mA
Output Drive Voltage	5V
Source 1&2	38kHz/56kHz Selectable
Source 3&4	38kHz
Compatible with single and dual emitters	

### System

System On	5V @ 50mA
External Mute	3-12V DC

### Power Requirements

Power Supply	90-260VAC 50/60Hz
Power Consumption all channels driven to full-rated power	140W
Power Consumption average operating conditions	30W
Power Consumption no signal	Less than 10W

### Physical Specifications

Unit Size Millimeters	44 x 430 x 270
Unit Size Inches	1.75 x 17 x 10.625
Unit Weight Kilograms	2.95
Unit Weight Pounds	6.5

NuVo reserves the right to change specifications without notice.



# **NūVō<sup>®</sup>**

SMP 510 05  
0541

---

NuVo Technologies  
4940 Delhi Pike Cincinnati, Ohio 45238, USA  
[www.nuvotechnologies.com](http://www.nuvotechnologies.com)  
Ph: 513-347-2180